




Step 3 of 3

On your Chromebook's keyboard, press and hold **Refresh**  and tap **Power** . When your Chromebook starts up, release **Refresh** . If you're using a Chromebook tablet, hold the **Volume Up** and **Power** for at least 10 seconds, then release them.

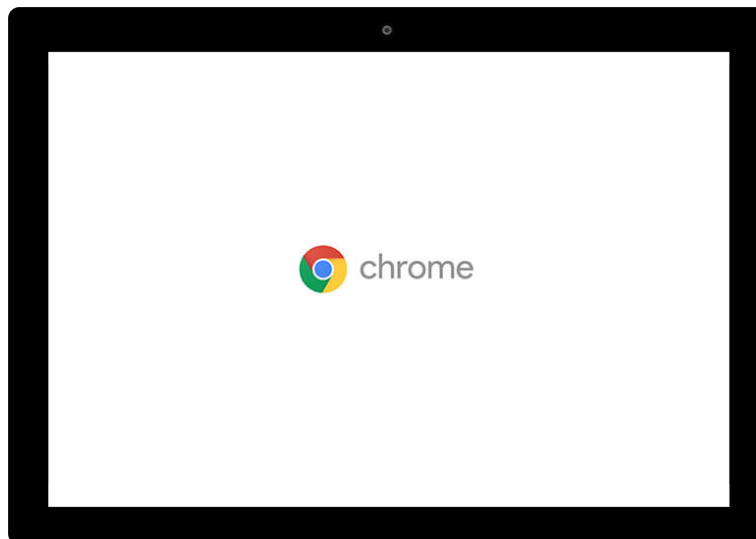

 You're all done.

Now you can reset your Chromebook.

Google